

# DB-MT Installation Instructions new hook

**Tools needed:** 2) 7/16" Either sockets or open end wrenches, and 2) 9/16" Either sockets or open end wrenches


## MAIN COMPONENTS

- A** 3) pc SUPPORT ARM
  - 1) 12" center 2) 16" ends
- B** Ball mounting base
- C** 4) Mountain Hooks
- D** 2) Retainer Brackets

## FASTENERS

- In bag
- 8) 1/4" x 3/4" bolts, nuts and lock washers
- 1) 3/8" x 2" bolt, lock washer and nut
- 2) 2" PTO clips

### Step 1- Mount the 12" center arm to B the ball mounting base

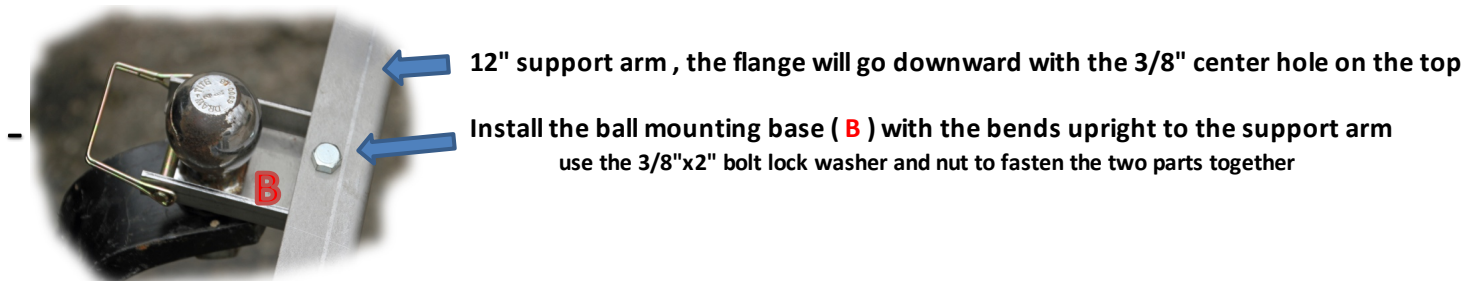


### Step 2- Bolt the three overlapping arms ( A ) with 2) 1/4" x 3/4" bolts, lock washers and nuts .

**\*\* Arms can be set for two lengths - either 36" or 40" long**



**NOTE: Both diagrams are showing the right arm assemble, repeat same alignment for the left arm**

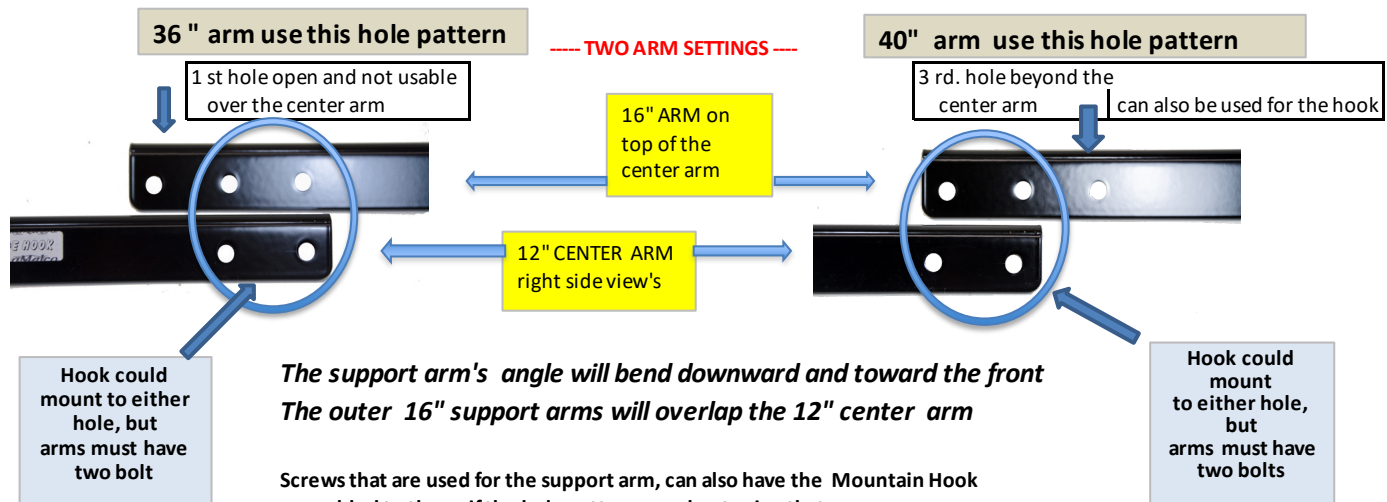

Tip: Before final assembly of the arm in step two, take the arm with only two screws attached and lay it on top of your trash cans near the handles. First place the cans side by side with about 1" of space between them. Now it is easier to select what hole to use for mounting the hooks. You might need to reset the arm size and re-due the screws that you previously used to secure the 3 piece support arm. The **arm will not** be the same width as the overall trash cans. Try the 36" width arm setting first.




### Step 3- Mount the 4) MT- Hooks and 2) Retainer bracket to the support arm

Use the inner bolt hole that are also for fastening the two arms together and one of the 3) holes at each end of the support arm the outer holes are spaced at 1-1/2" increments to fit most of today's wheeled totes


Mount the two outer MT- Hooks using 2- 1/4" x 3/4" bolt, lock washers and nuts.

- \* the MT- hooks mount to the face of the support arm, have a lower tab that will wrap under the support arm
  - \* The two inner most hooks will also have the Rear Retainer bracket installed behind and under the support arm
  - \* The rear retainer brackets can be installed in any spot as long as there is one per can.
- Note:** push the retainer bracket tight to the under side so it will stay straight and inline with the hook.
- \* Tighten the bolts so hooks will not move.

Backside view

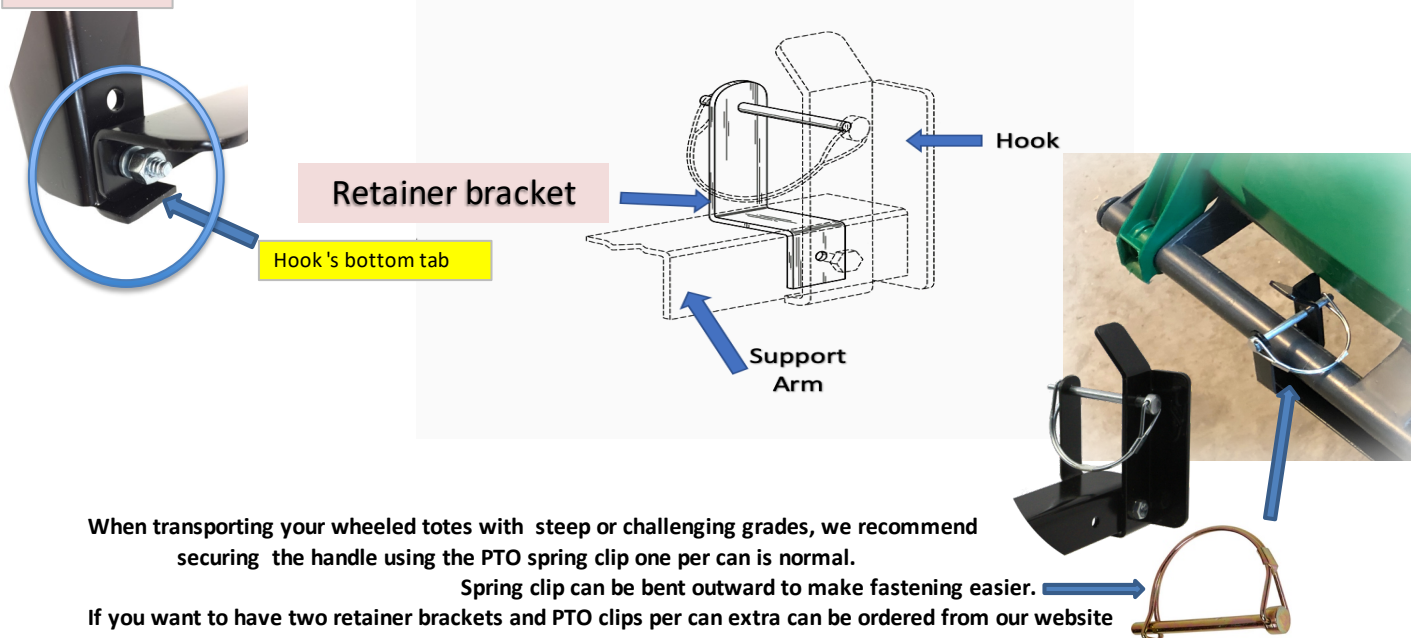

### Step 4- When ready to use slip the ball mounting base under your trailer ball

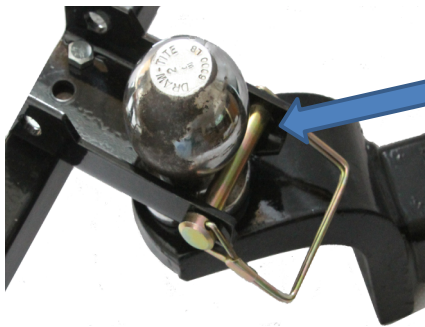

To mount your Garbage Hook to your receiver hitch simply insert the 3/8" retainer pin thru the ball mounting base and under your 1-7/8" or 2" ball

#### Warnings:

- Keep all nuts tightened
  - Do Not exceed 15 MPH, or 150 lbs.
  - Do Not carry passengers
  - Do Not use on public roads
- Turn off vehicle and put in park before attaching your Garbage Hook.

**Garbage Hooks are designed for towing,  
DO NOT backup with cans attached. Damage could accrue**

**Thank you for your order, as a small company we truly appreciate your business!**

*If you have any questions or concerns with your order, please contact us at 608- 728-2709 or send an email to- [info.garbagecommander@gmail.com](mailto:info.garbagecommander@gmail.com) before leaving a review, we promise to make things right with you.*

**\*\* Help us grow by spreading the word and taking the time to leave a positive review.**



**Garbage Commander by:**  
LaMalco LLC – PO Box 2812 Janesville, WI. 53547-2812  
Garbage Hooks are patented and made in the USA.  
Patent US 9,789,741 B1



**You Tube**

