


# SR-MT Installation Instructions 6-20 v.3

**Tools needed:** 2) 7/16" Either sockets or open end wrenches, and 2) 9/16" Either sockets or open end wrenches

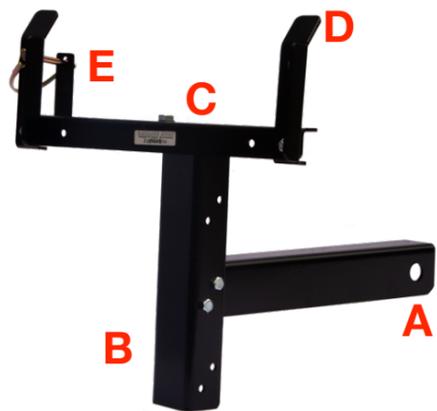

## MAIN COMPONENTS

- A** Receiver Base
  - B** Adjustable Upright  
W/ Swivel Tab
  - C** 12" Support Arms
  - D** 2) Mountain Hooks
  - E** 1) Retainer Bracket
- One set per can come std with order, *additional* set can be ordered.

## FASTENERS

- 6) 1/4" x 3/4" bolts, nuts and lock washers
- 1) 3/8" x 1" bolt, washer and , lock nut
- 1) 2" PTO clips


## Installation Videos

[garbagecommander.com](http://garbagecommander.com)

OR

[youtube.com](http://youtube.com)

### Step 1- Bolt the Adjustable Upright (B) to the receiver Base (A)

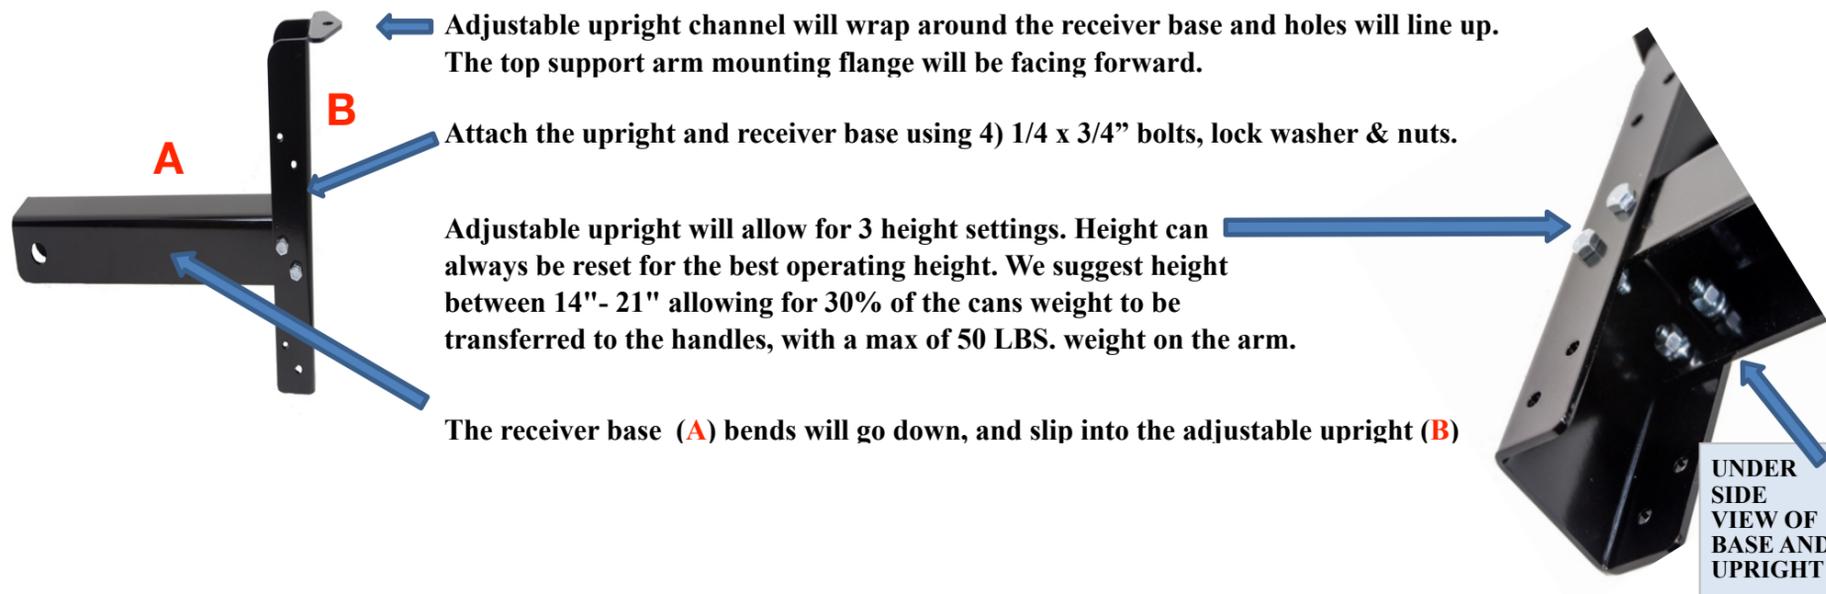

### Step 2- Mount the 2) MT- Hooks and 1) Retainer bracket to the support arm

There are two hook setting the outer holes are 12" and the inside hole will be 9"

Mount the two MT- Hooks using the 1/4" x 3/4" bolt, lock washers and nuts.


\* MT- hooks mount to the face of the support arm, the lower tab that will wrap under the bottom edge of the support arm.

\* The rear retainer bracket installed behind and under the support arm.

\* The rear retainer brackets can be installed in any spot as long as there is one per can.

**Note:** Push the retainer bracket tight to the under side so it will stay straight and inline with the hook.


\* Tighten the bolts so hooks will not move.

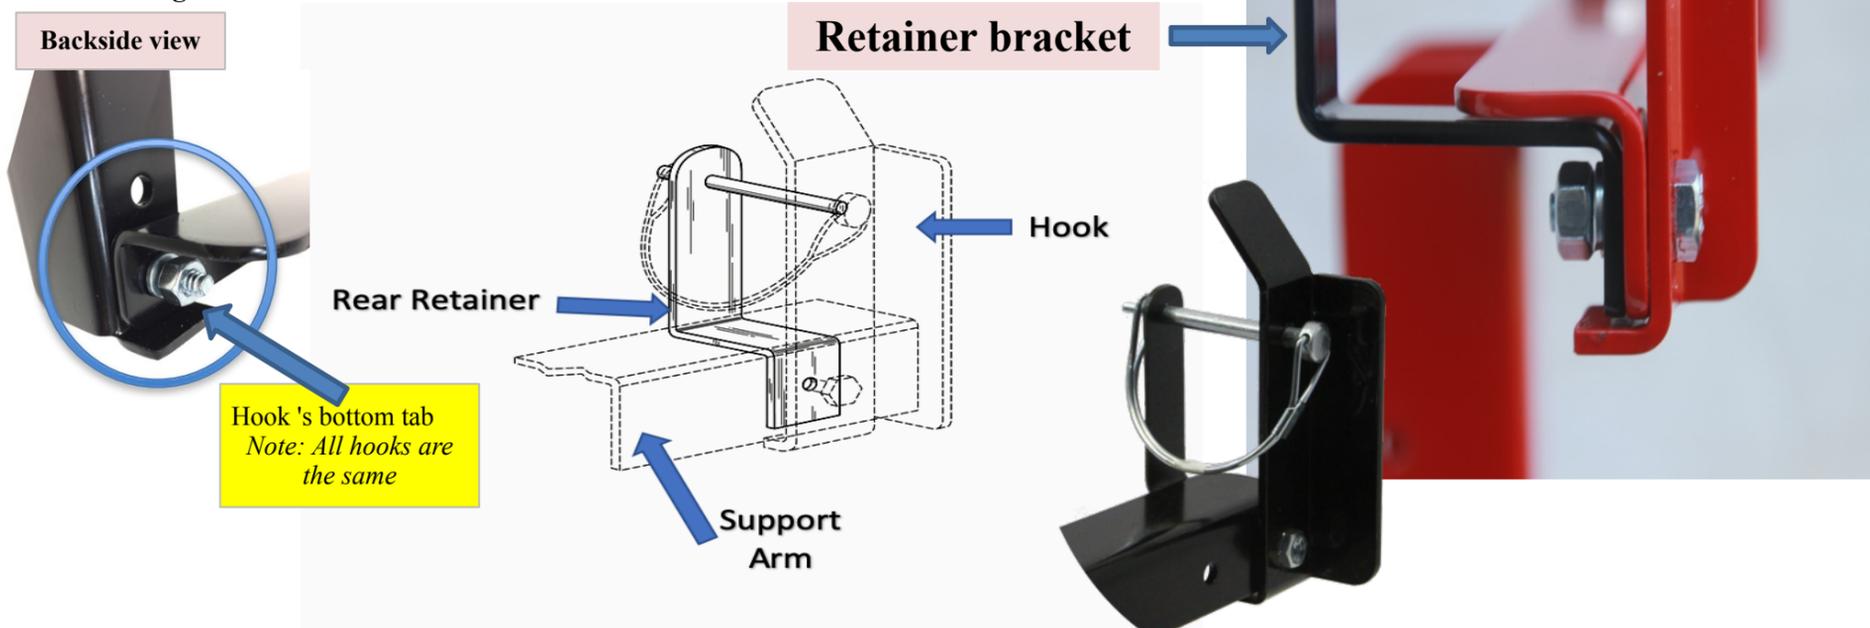

When transporting your wheeled totes with steep or challenging grades, we recommend securing the handle using the PTO spring clip one per can comes standard with order.

**If you want to have two retainer brackets and PTO clip for both hooks they can be ordered from our website.**

**Step 3- Take the assembled upright and receiver base, and attach the support arm**

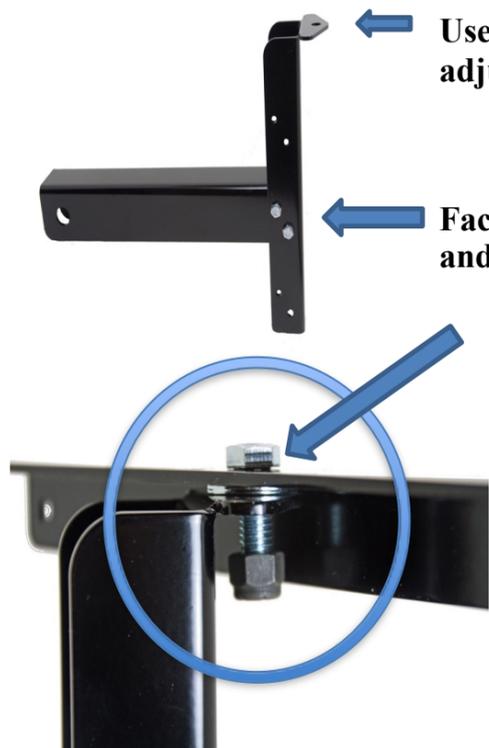


Use the 3/8 x 3/4" bolt, washer and black lock nut to secure support arm to the swivel tab on top of the adjustable upright (B).

Face of support arm, the assembled support arm should be installed with the angle bends facing backward and the support arm tab forward.

Make sure the 3/8" washer is between the swivel base and the support arm as a spacer.  
**TIGHTEN SNUG**, so arm is not loose and moves harder, but can still pivot.  
 Allowing the support arm to swivel on the base but not wobble.

When transporting your wheeled totes with steep or challenging grades, we recommend securing the handle using the PTO spring clip one per can is normal.

**\*\*Spring clip can be bent outward to make fastening easier.**

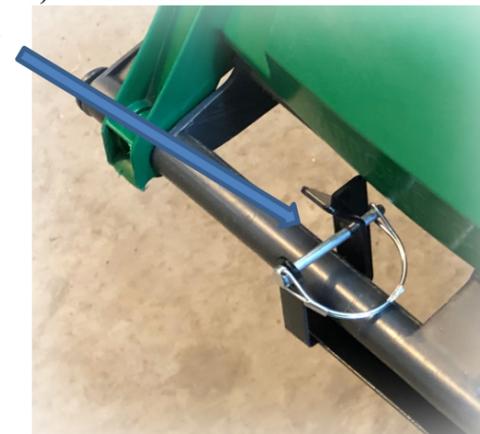

If you want to have two retainer brackets and PTO clips per can, they can be ordered from our website.

We also offer on our website Ball hold down straps that are easy to apply and give extra holding if PTO clips are hard to use.



**Warnings:**

- Keep all nuts tightened
  - Do Not exceed 15 MPH, or 150 lbs.
  - Do Not carry passengers
  - Do Not use on public roads
- Turn off vehicle and put in park before attaching your Garbage Hook.

**\*\*Garbage Hooks are designed for towing,  
 DO NOT backup with cans attached. Damage may accrue\*\***

*Thank you for your order, as a small company we truly appreciate your business!*



*If you have any questions or concerns with your order, please text us at 608- 728-2709 or send an email to- [info.garbagecommander@gmail.com](mailto:info.garbagecommander@gmail.com)*

*Before leaving a negative review, we promise to make things right with you. Help us grow by spreading the word and taking the time to leave a positive review.*



Garbage Commander by:  
 LaMalco LLC – PO Box 2812 Janesville, WI. 53547-2812  
 Garbage Hooks are patented and made in the USA.  
 Patent US 9,789,741 B1

